

OPERATION MANUAL

SK330-10 SK350LC-10

APPLICABLE No.

SK330-10	LC14405001~
SK350LC-10	YC14405001~



READ, UNDERSTAND AND FOLLOW ALL SAFETY PRECAUTIONS AND INSTRUCTIONS FOUND IN THIS MANUAL BEFORE OPERATING THE MACHINE.

Book Code No. **S2LCT0007ZE01**

2020.01

Destination : ANZ

IMPORTANT INFORMATION

PREFACE	0-3
STORE OPERATION & MAINTENANCE MANUALS ON THE MACHINE	0-4
SAFETY INFORMATION IN MESSAGES OR LABELS IN THIS MANUAL AND ON THE MACHINE	0-5
SAFETY LABELS	0-5
SUMMARY OF THE MACHINE	0-7
QUALIFICATION FOR OPERATING THE MACHINE	0-8
CAB WITH ROPS (ROLL-OVER PROTECTIVE STRUCTURE)/FALLING OBJECTS PROTECTIVE STRUCTURE	0-9
ORDERING PARTS AND SERVICE	0-10
WARRANTY	0-11
IMPORTANT NOTIFICATION	0-12

1. SAFETY PRECAUTIONS

1.1 SAFETY LABELS & DECALS	1-3
1.1.1 ALWAYS MAKE SURE ALL OF THE SAFETY LABELS ARE LEGIBLE AND NOT DAMAGED	1-3
1.1.2 LOCATION OF SAFETY LABELS & DECALS	1-4
1.1.3 SAFETY LABELS	1-7
1.2 PRE-START SAFETY	1-14
1.2.1 OPERATION RULES	1-14
1.2.2 PROTECTION TOOLS	1-15
1.2.3 ABNORMAL AND EMERGENCY CONDITION	1-16
1.2.4 POTENTIAL HAZARDS WHEN OPERATING	1-17
1.2.5 FIRE PREVENTION	1-18
1.2.6 GETTING ON AND OFF THE MACHINE	1-19
1.2.7 INSPECTION AND MAINTENANCE ON THE MACHINE	1-20
1.3 SECURE VISIBILITY	1-21
1.3.1 BE AWARE OF YOUR SURROUNDINGS	1-21
1.4 PRECAUTIONS FOR OPERATION	1-22
1.4.1 STARTING	1-22
1.4.2 TRAVELING	1-26
1.4.3 PRECAUTIONS OF WORK	1-29
1.4.4 SAFETY CHECK ON THE PARKING MACHINE	1-35
1.5 AT THE END OF EACH SHIFT	1-36
1.6 PRECAUTIONS OF INSPECTION & MAINTENANCE	1-37
1.6.1 PERIODIC INSPECTIONS	1-37
1.6.2 BEFORE INSPECTION & MAINTENANCE	1-37
1.6.3 DURING INSPECTION & MAINTENANCE	1-38
1.6.4 PROHIBITED IN INSPECTION & MAINTENANCE	1-43
1.6.5 AFTER INSPECTION & MAINTENANCE	1-44
1.7 PRECAUTIONS FOR BATTERY	1-45
1.7.1 HANDLING THE BATTERY	1-45
1.8 HANDLING OF THE ACCUMULATOR OR GAS SPRING	1-47
1.9 TOWING THE MACHINE	1-48
1.9.1 TOWING METHOD OF THE MACHINE	1-48

[CONTENTS]

2. MACHINE FAMILIARIZATION

2.1	BASIC COMPONENTS OF THE MACHINE	2-3
2.2	OPERATOR'S STATION NOMENCLATURE	2-5
2.3	GAUGE CLUSTER.....	2-7
2.3.1	MULTI-DISPLAY	2-8
2.3.2	ENGINE COOLANT TEMPERATURE METER	2-8
2.3.3	FUEL LEVEL METER.....	2-8
2.3.4	HOUR METER.....	2-8
2.3.5	SCREEN CHANGE SWITCH	2-9
2.3.6	BUZZER STOP SWITCH.....	2-10
2.3.7	WORK MODE SELECT SWITCH	2-11
2.3.8	WASHER SWITCH	2-12
2.3.9	WIPER SWITCH.....	2-12
2.3.10	TRAVEL SPEED SELECT SWITCH	2-13
2.3.11	AUTO ACCELERATION SWITCH.....	2-14
2.3.12	ATTACHMENT MODE SELECT SWITCH	2-15
2.3.13	MENU SWITCH	2-16
2.3.14	USER MENU SETTING.....	2-17
2.3.15	DISPLAY FOR MAINTENANCE	2-28
2.3.16	WARNING DISPLAY SCREEN.....	2-29
2.4	HANDLING OF SWITCHES AND METERS	2-32
2.4.1	STARTER SWITCH.....	2-32
2.4.2	ENGINE THROTTLE.....	2-32
2.4.3	WORKING LIGHT (BOOM AND DECK).....	2-33
2.4.4	HEAVY LIFT SWITCH	2-33
2.4.5	PRESSURE RELEASE SWITCH	2-34
2.4.6	QUICK HITCH OPERATION SWITCH	2-34
2.4.7	CAP (OPTION SWITCH)	2-35
2.4.8	HORN SWITCH	2-35
2.4.9	POWER BOOST SWITCH.....	2-35
2.4.10	ENGINE THROTTLE FOR REDUNDANT MODE	2-36
2.4.11	SWING PARKING BRAKE RELEASE SWITCH	2-37
2.4.12	KPSS RELEASE SWITCH.....	2-37
2.4.13	ENGINE STOP SWITCH	2-38
2.4.14	12 V POWER SUPPLY	2-38
2.4.15	USB PORT/EXTERNAL INPUT TERMINAL (AUX)	2-39
2.4.16	Level Gauge	2-39
2.5	HANDLING OF LEVERS AND PEDALS.....	2-40
2.5.1	LOCATION OF LEVERS AND PEDALS	2-40
2.5.2	Pilot Control Shut-Off Lever.....	2-41
2.5.3	OPERATOR CONTROL LEVERS	2-42
2.5.4	TRAVEL LEVER & PEDAL.....	2-43
2.6	HANDLING OF FUSE & RELAY BOX	2-44
2.6.1	ABOUT FUSE & RELAY BOX	2-44
2.6.2	REPLACING FUSES.....	2-44
2.6.3	FUSE CAPACITY AND CIRCUIT NAME	2-45

2.7	HANDLING OF FUSIBLE LINK (FOR STARTER)	2-46
2.7.1	FUSIBLE LINK INSPECTION/REPLACEMENT	2-47
2.8	CONTROLLER	2-48
2.9	HANDLING OF RADIO	2-49
2.9.1	NAME OF EACH PART	2-49
2.9.2	RECEIVABLE FREQUENCY	2-50
2.9.3	SOURCE ON	2-50
2.9.4	SWITCHING SOURCE	2-51
2.9.5	FM/AM	2-52
2.9.6	USB AUDIO	2-55
2.9.7	BLUETOOTH AUDIO	2-60
2.9.8	AUX	2-61
2.9.9	CLOCK DISPLAY	2-61
2.9.10	VOLUME CONTROL	2-62
2.9.11	DISPLAY CHANGE	2-63
2.9.12	MENU	2-65
2.9.13	BLUETOOTH AUDIO FUNCTION, AND USB PORT/EXTERNAL INPUT TERMINAL	2-73
2.10	AIR CONDITIONER	2-74
2.10.1	GRILLE (AIR OUTLET)	2-74
2.10.2	AIR CONDITIONER CONTROL PANEL	2-75
2.10.3	AIR CONDITIONER OPERATION PANEL	2-76
2.10.4	HOW TO USE AIR CONDITIONER	2-79
2.10.5	SELF-DIAGNOSIS FUNCTION IN DISPLAY MONITOR	2-81
2.10.6	HANDLING AT IN-SEASON/OFF-SEASON	2-82
2.11	HANDLING OF SEAT BELT	2-83
2.11.1	HOW TO FASTEN SEAT BELT	2-83
2.11.2	HOW TO UNFASTEN SEAT BELT	2-83
2.12	HANDLING OF OPERATOR'S SEAT	2-84
2.12.1	HEIGHT AND TILT ADJUSTMENT	2-84
2.12.2	RECLINING ADJUSTMENT	2-84
2.12.3	FRONT/REAR SEAT ADJUSTMENT	2-84
2.12.4	FORWARD AND REARWARD ADJUSTMENT OF CONTROL STAND	2-85
2.12.5	ARM REST ADJUSTMENT	2-85
2.12.6	HEAD REST ADJUSTMENT	2-85
2.12.7	SUSPENSION ADJUSTMENT	2-85
2.13	HANDLING PARTS INSIDE CAB	2-86
2.13.1	CAB DOOR LOCK	2-86
2.13.2	OPENING DOOR FROM INSIDE OF CAB	2-86
2.13.3	OPENING/CLOSING FRONT WINDOW (UPPER)	2-87
2.13.4	RETRACTING FRONT WINDOW (LOWER)	2-88
2.13.5	CAB ROOM LAMP	2-88
2.14	EMERGENCY ESCAPE FROM OPERATOR'S STATION	2-89
2.15	OTHER ACCESSORIES	2-90
2.15.1	TOOL BOX	2-90
2.15.2	GREASE GUN HOLDER	2-90
2.15.3	CUP HOLDER	2-90
2.15.4	GUARD/SIDE DOOR (WITH LOCK)	2-91

[CONTENTS]

2.16	BATTERY POWER-OFF SWITCH	2-93
3. MACHINE OPERATION		
3.1	EVERYDAY CHECK-UP	3-3
3.2	CHECK BEFORE STARTING ENGINE	3-4
3.2.1	CHECKING COOLANT LEVEL AND REFILLING	3-4
3.2.2	CHECKING ENGINE OIL LEVEL OF ENGINE OIL PAN AND REFILLING	3-5
3.2.3	CHECKING FUEL LEVEL AND REFUELING	3-6
3.2.4	DRAINING FUEL PRE-FILTER	3-7
3.2.5	CHECKING OIL LEVEL OF HYDRAULIC OIL TANK	3-8
3.2.6	CHECKING FAN BELT AND AIR CONDITIONING COMPRESSOR BELT	3-9
3.2.7	ADJUSTMENT OF OPERATOR'S SEAT	3-10
3.2.8	ADJUSTMENT OF MIRRORS	3-11
3.2.9	CHECKING MULTI-DISPLAY	3-13
3.2.10	CHECKING WORKING LIGHT	3-14
3.2.11	CHECKING OF AIR CLEANER INLET	3-14
3.3	STARTING ENGINE	3-15
3.3.1	START-UP UNDER NORMAL TEMPERATURE CONDITIONS	3-15
3.3.2	START UP IN COLD CONDITIONS	3-16
3.3.3	USING JUMPER CABLES	3-17
3.4	STOPPING MACHINE ENGINE	3-19
3.5	CHECK AFTER STARTING ENGINE	3-20
3.5.1	CHECK OF PILOT CONTROL SHUT-OFF LEVER	3-20
3.5.2	CHECK OF ENGINE AND MULTI-DISPLAY	3-21
3.6	WARMING-UP	3-22
3.6.1	ENGINE WARMING-UP	3-22
3.6.2	WARMING-UP HYDRAULIC OIL	3-23
3.7	AUTO IDLING STOP FUNCTION	3-24
3.7.1	RESTART AFTER AUTO IDLE STOP	3-24
3.8	SELECTION OF WORK MODE	3-25
3.9	SWITCHING ATTACHMENT MODE	3-26
3.10	MACHINE OPERATION	3-27
3.10.1	PRECAUTIONS OF MACHINE OPERATION	3-27
3.10.2	TRAVEL PROCEDURES	3-28
3.10.3	CHANGING TRAVEL SPEED (1ST AND 2ND)	3-30
3.10.4	MACHINE OPERATION IN WATER OR ON SOFT GROUND	3-31
3.10.5	GETTING OUT OF SOFT GROUND	3-32
3.10.6	SWING AND ATTACHMENT OPERATIONS	3-33
3.11	WORK PROCEDURES OF MACHINE	3-36
3.11.1	DIGGING WORK	3-36
3.11.2	LOADING WORK	3-36
3.12	ALWAYS PARK MACHINE PROPERLY	3-37
3.12.1	PARKING MACHINE ON SLOPE	3-37
3.13	INSPECTION AND CHECK AFTER OPERATION	3-38
3.14	MACHINE OPERATION IN ADVERSE CONDITIONS	3-39
3.14.1	OPERATION IN COLD CONDITION	3-39

3.14.2	OPERATION AT SEASHORE.....	3-40
3.14.3	OPERATION IN SANDY AND DUSTY AREAS.....	3-40
3.15	PRECAUTIONS FOR LONG-TERM STORAGE	3-41
3.15.1	WASHING MACHINE	3-41
3.15.2	REFILLING OIL/GREASING	3-41
3.15.3	BATTERY	3-41
3.15.4	COOLANT	3-41
3.15.5	PREVENTION OF DUST AND MOISTURE	3-42
3.15.6	PERIODICAL LUBRICATING OPERATION (DURING STORAGE)	3-42
3.15.7	TREATMENT AFTER LONG-TERM STORAGE.....	3-42

4. INSPECTION AND MAINTENANCE

4.1	GENERAL	4-3
4.2	INSPECTING AND MAINTAINING MACHINE.....	4-4
4.2.1	PERIODIC INSPECTION AND MAINTENANCE.....	4-4
4.2.2	PRECAUTIONS OF INSPECTION AND MAINTENANCE	4-5
4.3	LUBRICANT, FUEL & COOLANT SPECIFICATIONS.....	4-6
4.4	ABOUT USE OF BIO-OIL (BIODEGRADABLE HYDRAULIC OIL).....	4-8
4.4.1	GREASE AND OIL FOR USE	4-8
4.4.2	PRECAUTIONS FOR BIO-OIL	4-8
4.4.3	REPLACEMENT INTERVAL OF BIO-OIL.....	4-8
4.4.4	FLUSHING PROCEDURES OF BIO-OIL	4-8
4.5	MAINTENANCE PARTS	4-9
4.6	TIGHTENING TORQUES FOR BOLTS & NUTS (SPECIFIC POSITIONS)	4-10
4.7	TIGHTENING TORQUES FOR CAPSCREWS AND NUTS	4-12
4.8	TIGHTENING TORQUES FOR JOINTS & HYDRAULIC HOSES	4-14
4.9	INSPECTION AND MAINTENANCE CHART	4-16
4.10	MAINTENANCE WHEN REQUIRED.....	4-21
4.10.1	CLEANING RADIATOR, OIL COOLER CORE AND SCREEN	4-21
4.10.2	CHECKING AND REPLACING WIPER BLADES.....	4-22
4.10.3	WASHER FLUID INSPECTION	4-23
4.10.4	REPLACING BUCKET.....	4-24
4.10.5	REPLACING TOOTH POINT AND SIDE CUTTER.....	4-26
4.10.6	INSPECTION AND ADJUSTMENT OF BUCKET GAP ADJUSTMENT MECHANISM.....	4-29
4.10.7	BLEEDING AIR FROM FUEL PIPING.....	4-30
4.10.8	RELEASING INTERNAL PRESSURE IN HYDRAULIC SYSTEM.....	4-31
4.10.9	GREASING ATTACHMENT/EQUIPMENT.....	4-32
4.10.10	GREASING ATTACHMENT/EQUIPMENT (2 POSITION BOOM)	4-33
4.11	8 HOUR (DAILY) INSPECTION & MAINTENANCE PROCEDURES.....	4-34
4.11.1	GREASING ATTACHMENT.....	4-34
4.12	50 HOUR INSPECTION & MAINTENANCE PROCEDURES	4-36
4.12.1	INSPECTING AND MAINTAINING BATTERY.....	4-36
4.12.2	DRAINING WATER AND SEDIMENT IN FUEL TANK.....	4-39
4.12.3	ADJUSTING CRAWLER TENSION	4-40
4.13	120 HOUR INSPECTION & MAINTENANCE PROCEDURES	4-42
4.13.1	CHECKING ENGINE OIL LEVEL OF SWING REDUCTION UNIT.....	4-42

[CONTENTS]

4.13.2	CHECKING OIL LEVEL OF TRAVEL REDUCTION UNIT	4-43
4.13.3	CHECKING INTAKE SYSTEM RUBBER HOSE	4-44
4.14	250 HOUR (3-MONTH) INSPECTION & MAINTENANCE PROCEDURES	4-46
4.14.1	ADJUSTING FAN BELT AND AIR CONDITIONING COMPRESSOR BELT	4-46
4.14.2	CHECKING RADIATOR HOSES	4-50
4.14.3	CLEANING OR REPLACING AIR CONDITIONER FILTERS	4-52
4.14.4	INSPECTING, CLEANING, OR REPLACING AIR CLEANER ELEMENT	4-54
4.14.5	CLEANING OR REPLACING RADIATOR CAP	4-56
4.15	500 HOUR (6-MONTH) INSPECTION & MAINTENANCE PROCEDURES	4-57
4.15.1	REPLACING ENGINE OIL AND ENGINE OIL FILTER	4-57
4.15.2	REPLACING FUEL PRE-FILTER	4-59
4.15.3	REPLACING FUEL FILTER	4-61
4.15.4	GREASING SWING BEARING	4-63
4.15.5	CHECKING SWING BEARING MOUNTING BOLT FOR LOOSENESS	4-63
4.15.6	CLEANING FUEL TANK CAP AND STRAINER	4-64
4.15.7	LUBRICATING PUSH ROD OF CONTROL LEVER	4-65
4.15.8	CHECKING AIR CONDITIONER REFRIGERANT	4-66
4.16	1000 HOUR (12-MONTH) INSPECTION & MAINTENANCE PROCEDURES	4-68
4.16.1	REPLACING RETURN FILTER	4-68
4.16.2	REPLACING AIR BREATHER ELEMENT	4-70
4.16.3	CHECKING ENGINE MOUNTING BRACKET FOR TIGHTENING CONDITION	4-71
4.16.4	CHECKING BATTERY VOLTAGE	4-71
4.17	2000 HOUR INSPECTION & MAINTENANCE PROCEDURES	4-72
4.17.1	REPLACING COOLANT	4-72
4.17.2	REPLACING OIL IN SWING REDUCTION UNIT	4-74
4.17.3	REPLACING OIL IN TRAVEL REDUCTION UNITS	4-75
4.17.4	CLEANING SUCTION STRAINER	4-76
4.17.5	GREASING SWING REDUCTION UNIT	4-78
4.17.6	CHECKING GREASE IN SWING GREASE BATH	4-79
4.17.7	CLEANING PILOT LINE FILTER	4-80
4.18	5000 HOUR INSPECTION & MAINTENANCE PROCEDURES	4-81
4.18.1	REPLACING HYDRAULIC OIL	4-81
5.	TRANSPORTATION	
5.1	TRANSPORTATION	5-3
5.1.1	STRICTLY OBSERVE TRANSPORTATION RELATED REGULATIONS	5-3
5.2	LOADING/UNLOADING THE MACHINE	5-4
5.2.1	LOADING	5-5
5.2.2	FIXING THE MACHINE	5-7
5.2.3	UNLOADING	5-8
5.3	MACHINE LIFTING	5-9
5.3.1	LIFTING PROCEDURES	5-10
5.4	INSTALLING AND REMOVING MIRROR	5-11
6.	SPECIFICATION	
6.1	GENERAL SPECIFICATIONS	6-3

6.1.1	SK330-10, SK350LC-10	6-3
6.2	SHOE TYPES AND USES	6-4
6.2.1	SK330-10	6-4
6.2.2	SK350LC-10	6-5
6.3	WORKING RANGES	6-6
6.3.1	BACKHOE ATTACHMENT	6-6
6.4	ATTACHMENT TYPE AND COMBINATION	6-7
6.4.1	FRONT ATTACHMENT VARIATION	6-7
7.	MACHINE OPERATION MANAGEMENT SYSTEM	
7.1	MACHINE OPERATION MANAGEMENT SYSTEM	7-3
7.2	REMOTE DOWNLOAD SYSTEM	7-4
8.	OPTIONAL EQUIPMENT	
8.1	OPERATION OF HYDRAULIC NIBBLER (CRUSHER) AND BREAKER	8-3
8.1.1	SELECTION OF NIBBLER (CRUSHER) AND BREAKER	8-3
8.1.2	INSTALLATION OF NIBBLER (CRUSHER) OR BREAKER	8-3
8.1.3	PRECAUTIONS IN USE OF BREAKER	8-3
8.1.4	PRECAUTIONS IN USE OF NIBBLER (CRUSHER)	8-8
8.2	SELECTION OF ATTACHMENT MODE AND SELECTOR VALVE	8-13
8.2.1	SELECTION OF ATTACHMENT MODE	8-13
8.2.2	SWITCHING SELECTOR VALVE	8-15
8.3	SWITCHING STOP VALVE	8-16
8.4	FLOW RATE ADJUSTMENT	8-17
8.5	OPERATION	8-18
8.5.1	PEDAL LOCK DEVICE	8-18
8.5.2	PEDAL OPERATIONS FOR HYDRAULIC BREAKER AND NIBBLER (CRUSHER) OPENING/ CLOSING	8-19
8.5.3	PEDAL OPERATION FOR NIBBLER (CRUSHER) ROTATION	8-20
8.6	CONTROL OF PROPORTIONAL HAND CONTROL EXTRA, NIBBLER (CRUSHER), BREAKER	8-21
8.6.1	EXTRA HAND CONTROL	8-22
8.6.2	HORN SWITCH	8-22
8.6.3	NIBBLER (CRUSHER) OPERATION	8-22
8.6.4	BREAKER OPERATION	8-23
8.6.5	POWER BOOST SWITCH	8-23
8.7	CONTROL OF PROPORTIONAL HAND CONTROL NIBBLER (CRUSHER), BREAKER	8-24
8.7.1	HORN SWITCH	8-25
8.7.2	NIBBLER OPERATION	8-25
8.7.3	BREAKER OPERATION	8-26
8.7.4	POWER BOOST SWITCH	8-26
8.8	PERIODIC INSPECTION AND MAINTENANCE OF NIBBLER (CRUSHER) AND BREAKER	8-27
8.8.1	PERIODIC INSPECTION AND MAINTENANCE CHART OF NIBBLER (CRUSHER) AND BREAKER	8-27
8.8.2	REINFORCEMENT OF ATTACHMENT	8-27
8.9	PRECAUTIONS FROM BREAKER MANUFACTURERS	8-28
8.10	MULTI-CONTROL VALVE	8-29

[CONTENTS]

- 8.11 QUICK HITCH..... 8-31
 - 8.11.1 PROHIBITED WORKS..... 8-31
 - 8.11.2 PRECAUTIONS FOR USE..... 8-32
 - 8.11.3 REMOVING FRONT ATTACHMENT 8-33
 - 8.11.4 INSTALLING FRONT ATTACHMENT 8-34
 - 8.11.5 MANUAL SWITCHING OF PRESSURE REDUCING VALVE FOR QUICK HITCH..... 8-35